



NOTE: S₁ IS AN SPST NORMALLY OPEN PUSHBUTTON SWITCH.

Figure 1 A handful of active and passive components form a one-of-three selector switch. Press switch S₁ once to advance to the next channel and twice more to revert to Channel 1.