


Figure 2

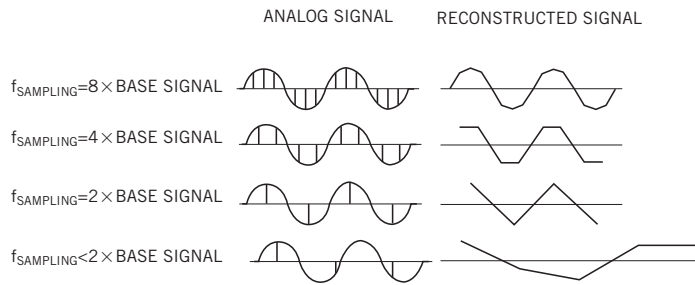

This time-domain representation shows how too slowly sampling analog signals creates low-frequency components (aliases) that do not exist in the original data.