


Figure 2

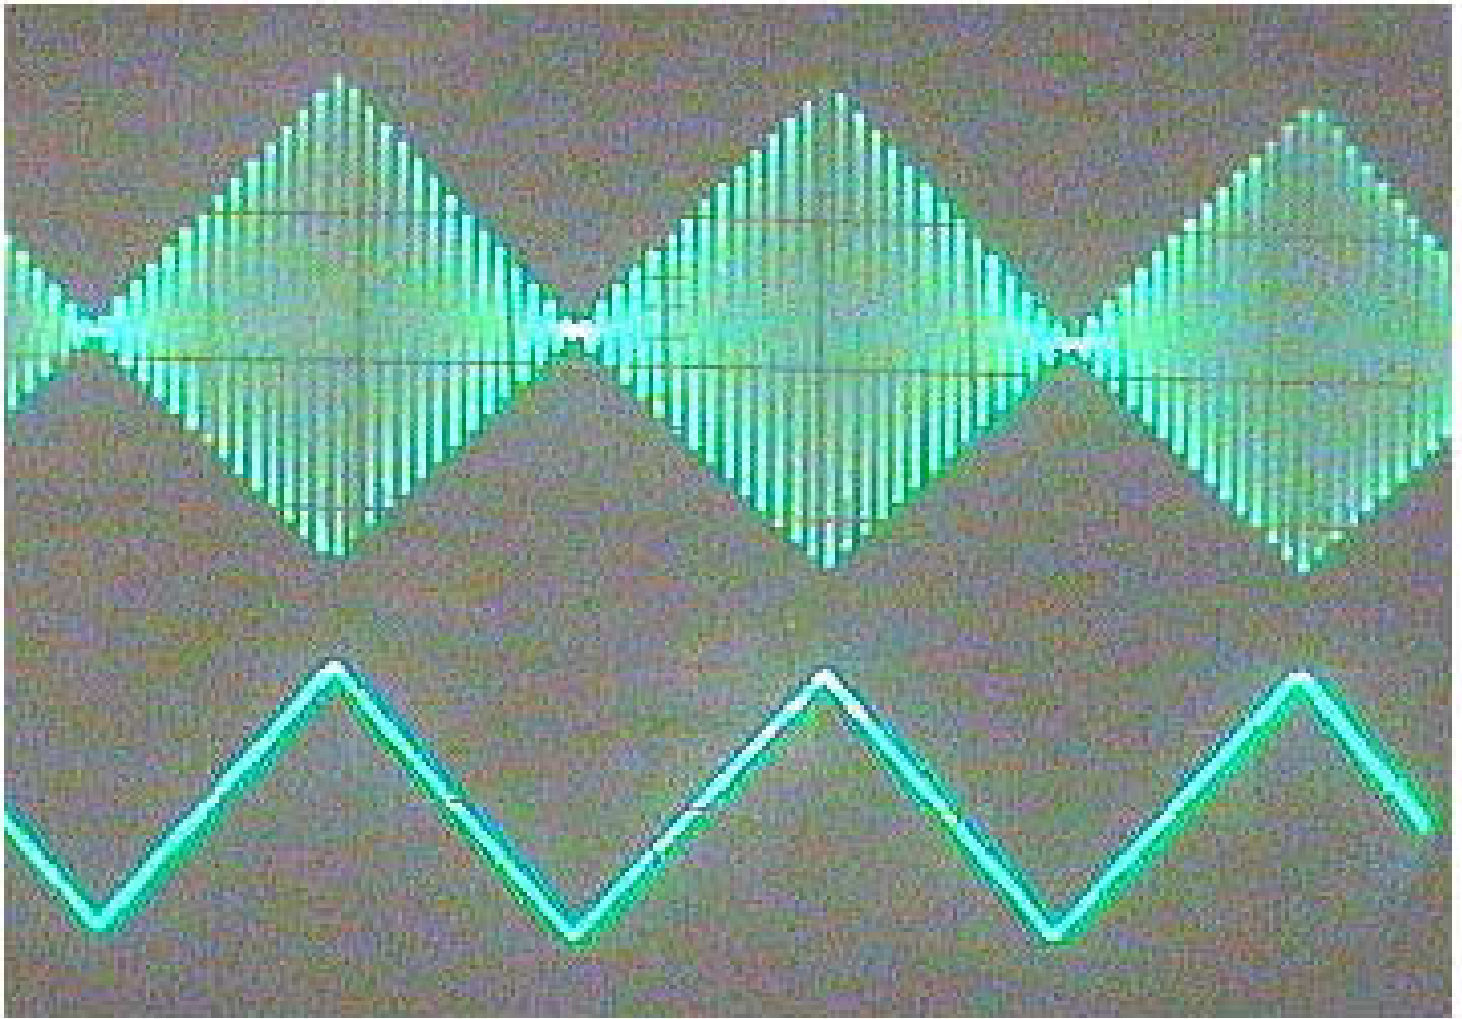

The lower trace is a 0 to 3V triangle wave, which you use to modulate the 10-kHz sine wave in the upper trace. Note the linear modulation envelope.